


16+ GT350 / 15+ Mustang Install Guide

Use this guide in addition to the blip module install manual.

Prepare for installing the blip module in/near the glove box:

- **Ground:** Clutch pass-through
- **Clutch:** Clutch pass-through
- **+12V:** Pin 6 (BU-GY) on BCM connector 2280A. This is switched 12V and will turn on with the vehicle.
- **Brake:** Pin 1 (VIO-WHT) on BCM connector 2280A OR Pin 4 (VIO-WHT) at the brake pedal switch. Active High (+12V) on pedal press.

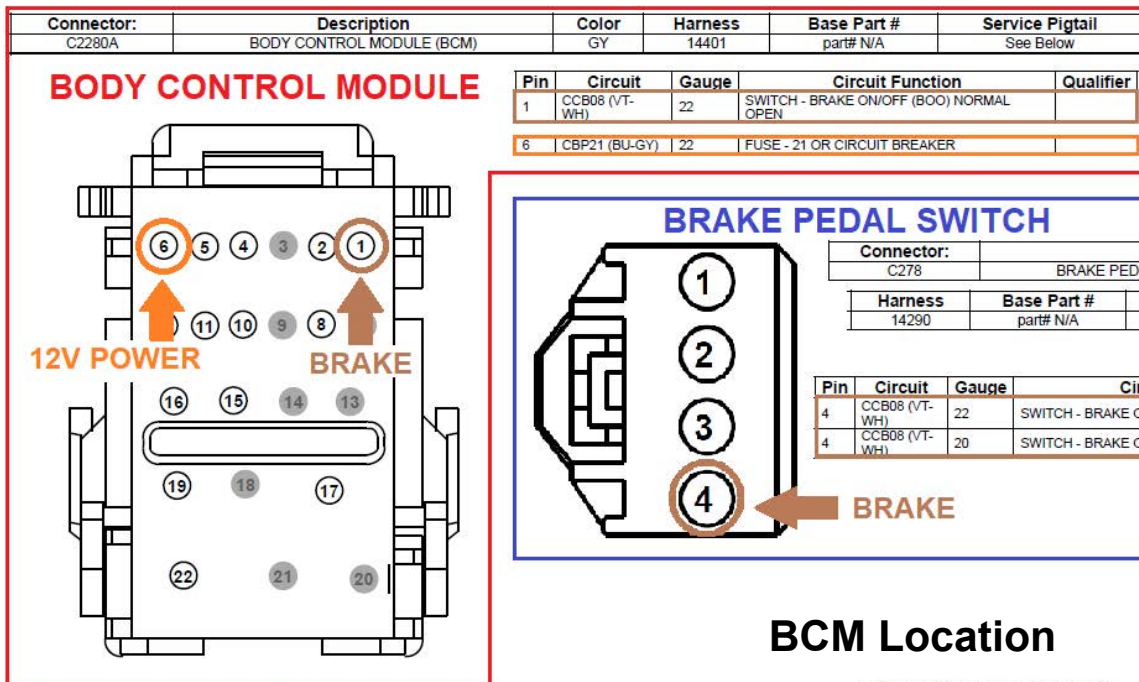

BCM Location

The BCM is located in the passenger foot well behind the interior trim panel.

4. Release the clips and remove the lower BL coil trim panel.

